


LED Wireless & Wire Driver

- Support RF 2.4GHz wireless signal and DMX wired connection.
- Can connect dimming, color temperature, RGB, RGBW, RGBWY lamps.
- Compatible with F series remote, RC4-RF-B remote and Q series remote.
- Compatible with EX series touch panel.
- Compatible with WiFi-106 or intelligent gateway.



System Diagram

L-BUS

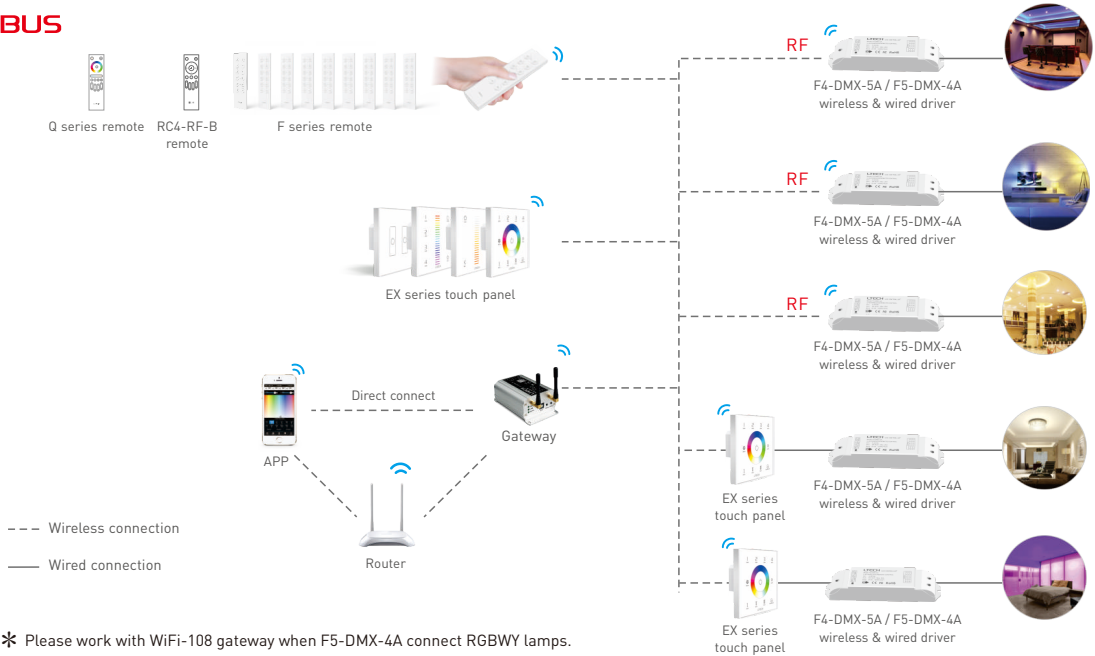


Specification


Model	F4-DMX-5A	F5-DMX-4A
Dimming interface	DMX/RDM	
Wireless signal	RF 2.4GHz	
Input voltage	5-24Vdc	
Output voltage	5-24Vdc	
Current load	5A×4CH Max. 20A	4A×5CH/5A×4CH Max. 20A
Output power	(0-25W...120W)×4CH Max. 480W	(0-20W...96W)×5CH Max. 480W
Protection	Short circuit / Reverse connection protection	Short circuit / over-heat / Reverse connection protection
Working temperature	-30 -55	
Product size	L175×W44×H30(mm)	
Package size	L178×W48×H33(mm)	
Weight(G.W.)	130g	

Product Size

Unit: mm

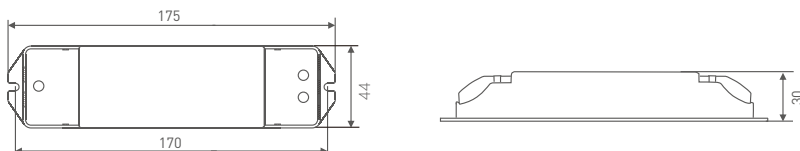

Terminal Description

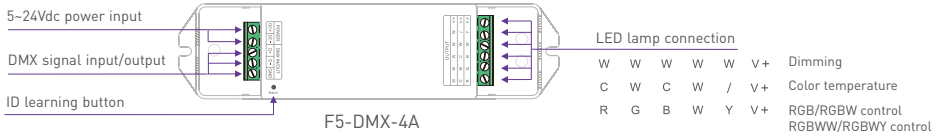

Match Code

Match Code (ID learning button method):

Step 1:

Short press "ID learning button" on driver, the lamps flicker, please complete step 2 within 15 seconds.



Match Code (power on method):

Step 1:

The driver power off.



Step 2:

Match up with F series remote:

Single zone remote: Long press On/Off key.
Multi-zone remote: Long press the matching zone ON & OFF keys simultaneously.



Match up with Q series or RC4-RF-B remote:

Long press the matching zone's ON key.



Match up with EX series panel:

Single zone panel: Long press On/Off key, then press any key.
Multi-zone panel: Long press On/Off key, then press the matching zone key.
* Please do it when panel is power-on.



Match up with 106 gateway:

Turn on APP, click "ZONE" key to enter "zone set" interface, click the right top "MATCH" key, then operate following the prompts.



Step 2:

Match up with F series remote:

Single zone remote: Hold down On/Off key, meanwhile the driver power on.
Multi-zone remote: Hold down the matching zone's On & Off keys simultaneously, meanwhile the driver power on.



Match up with Q series or RC4-RF-B remote:

Hold down the matching zone's ON key, meanwhile the driver power on.



Match up with EX series panel:

- A. Single zone panel: Long press ON/OFF key until all indicator flicking.
Multi-zone panel: Long press ON/OFF key until all zone's indicator flicking.
- B. The driver power on, the lamps flicker slowly, please complete step c within 15s.
- C. Single zone panel: press any key on panel.
Multi-zone panel: press the matching zone key.
* Please do it when panel is power-on.



Match up with 106 gateway:

Turn on APP, click "ZONE" key to enter "zone set" interface, click the right top "MATCH" key, then operate following the prompts.



Step 3:

The lamps of driver flicker quickly and then stop flicking, the buzzer long beep, match code successfully.

Step 3:

The lamps of driver flicker quickly and then stop flicking, the buzzer long beep, match code successfully.

Match up with other gateway, please operate according to APP's prompts.



Clear Code:

Clear Code (ID learning button method):

Long press "ID learning button" on driver for 10 seconds, If the lamps flicker 5 times, deactivate the matching successfully.




Clear Code (power on method):

Power on and off driver continuously for 10 times, If the lamps flicker 5 times, deactivate the matching successfully.



DMX Wiring Diagram

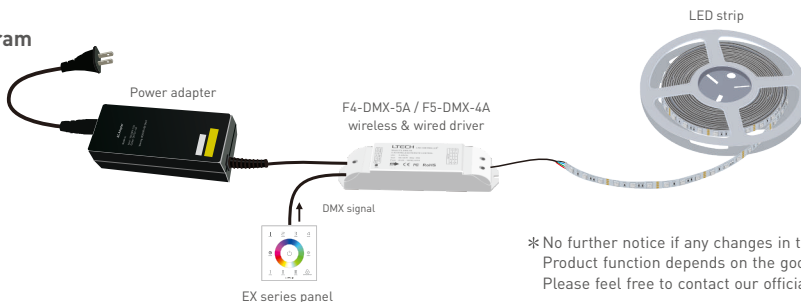

*No further notice if any changes in the manual.
Product function depends on the goods.
Please feel free to contact our official distributor if any question.